

REME-LED TECHNICAL BULLETIN

November 17, 2020

Re: REME-HALO-LED Installation – Air Sensing Switch (RGF part # HLED-AS)

NOTICE TO INSTALLER

1. The Halo-LED **cannot** be wired directly to the EAC terminal, doing so will damage the unit and **void the warranty**.
2. For gas heat units with a cap start, 2 speed blower the unit can be wired with the provided relay as described in the manual, with the exception that TERMINAL 5 must be jumped to the low speed fan heat terminal on the fan control board.
3. Gas heat units with a variable speed fan motor must use the optional air sensing kit (RGF part #HLED-AS), available at your local distributor.

For installation other than those discussed in the provided installation manual, the optional air sensing kit (HLED-AS) must be used. **The optional air sensing kit can be used for all installations, without exception.**

This part is available to order through RGF using part # HLED-AS. We ask that you share this information with your installers and recommend that you stock this item as needed.

Doc# TechLED1120 Approved by LB

RGF Environmental Divisions

